


CUSTOMER BIN SITE PREPARATION

- 1) Level Your Site – Extraordinary site work done by Superior, Inc. will warrant an extra charge.
- 2) Place 12" of fill on level site. Additional fill should be close by.
- 3) Knock down, level, and compact fill within Bin Radius.
- 4) Superior, Inc. will place and compact remaining fill as needed for final screeding.

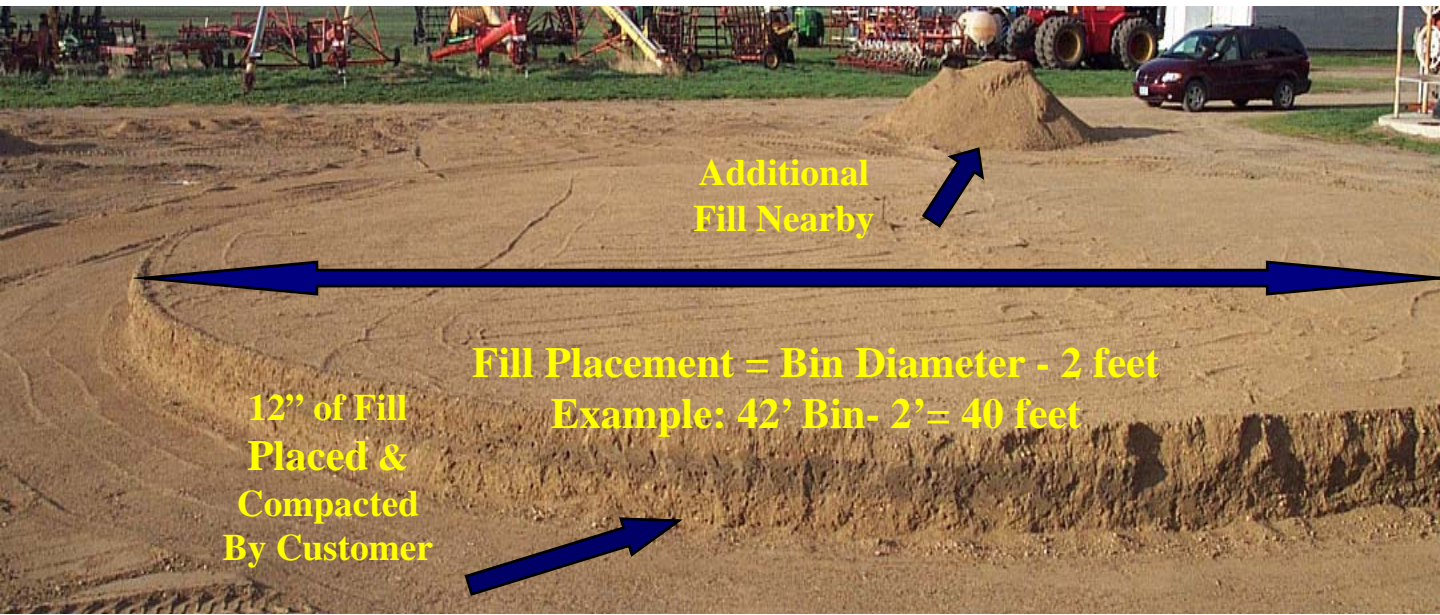

Bin Size	Est. Fill (yds)		Est. Concrete (yds)		Form	With Anchor Brackets	
	12"	18"	16"	24"	Radius	A/B Radius	A/B Chord
18'	14	21	8 1/2	N/A	9' 6-19/32"	9' 2-3/16"	4' 9-1/16"
21'	18	27	10 3/4	N/A	11' 1-11/16"	10' 8-1/16"	4' 9"
24'	24	36	13 1/2	N/A	12' 8- 3/4"	12' 2"	4' 8-15/16"
27'	30	45	16	N/A	14' 3-7/8"	13' 7-29/32"	4' 8-15/16"
30'	36	54	19	24	15' 11"	15' 1-13/16"	4' 8-7/8"
33'	44	66	22 1/2	29	17' 6-3/32"	16' 7-23/32"	4' 8-27/32"
36'	52	78	27	33	19' 1-3/16"	18' 1-5/8"	4' 8-13/16"
42'	70	105	38	45	22' 3-3/8"	21' 1-1/2"	4' 8-3/4"
48'	94	140	48	57	25' 5-9/16"	24' 1-7/32"	4' 8-11/16"
54'	N/A	170	N/A	85	29' 5-11/32"	27' 2-17/32"	4' 8-29/32"
60'	NA	200	N/A	110	32' 7-17/32"	30' 2-1/16"	4' 8-13/16"